

ADVANCED DYNAMO 500 SERIES CONTROL BOX OPERATION INSTRUCTIONS

TO OPERATE: (Vehicle fuel tank must be more than ¼ full to operate generator)

- 1. TURN ON 12V POWER :** **UP** for Start/Stop, Remote & Diagnostic functions
CENTER for OFF
DOWN for Start/Stop in no-power-draw, stand-by mode
- 2. USE MOMENTARY FAN TEST SWITCH (LOWEST):** TO CONFIRM PRIMAY (UP) & SECONDARY (DOWN) COOLING FAN FUNCTION
- 3. TO START/STOP:** PUSH (CENTER) BUTTON FOR ONE SECOND
- 4. END OF DAY:** TURN 12V POWER SWITCH TO “OFF” (CENTER POSITION).

NOTE: Automatic fan circuit will activate regardless of 12V master switch position!

