



ADyI

ADVANCED DYNAMO INDUSTRIES, INC.

19425 SW 89TH AVE
TUALATIN, OR 97062
PHONE: (503)692-5995
FAX: (503)885-0417
EMAIL: SALES@ADVANCEDDYNAMO.COM
INFO@ADVANCEDDYNAMO.COM
SERVICE@ADVANCEDDYNAMO.COM

ADVANCED DYNAMO 415D/420D GENSET CONTROL BOX OPERATION INSTRUCTIONS

TO OPERATE: (Vehicle fuel tank must be more than ¼ full to operate generator)

- 1. TURN ON 12V POWER :** **UP** for Start/Stop, Remote & Diagnostic functions
DOWN for OFF
- 2. USE FAN TEST SWITCH (LOWEST):** To confirm PRIMARY (UP) & SECONDARY (DOWN) Cooling Fan function.
- 3. TO START (MIDDLE SWITCH):** Push toggle to the left and HOLD FOR 5 SECONDS to preheat the diesel glow plug, and THEN PUSH TOGGLE TO THE RIGHT TO START THE ENGINE, release the toggle once engine has started.
- 4. TO STOP (MIDDLE SWITCH):** Push Toggle to the left.
- 5. END OF DAY:** Turn 12V power switch to "OFF" (DOWN POSITION).
- 6. CHANGE OIL & FILTER EVERY 300 HOURS** with 15W-40 full synthetic oil and NAPA #1515 Oil Filter. Change break-in oil at first 50 hours.

NOTE: Automatic fan cool down circuit will activate regardless of 12V master switch position!

